


MOTION DETECTION

1. Scroll the button "⚙️" upward or downward to move the cursor to the option "Mode", then press "⚙️" to enter the "Mode" menu.



2. Scroll the button "⚙️" downward to move the cursor to the option "Motion Detection", the motion detection has 4CH for choose: door1, door2, camera1, camera2; but not support 4CH works at same time.

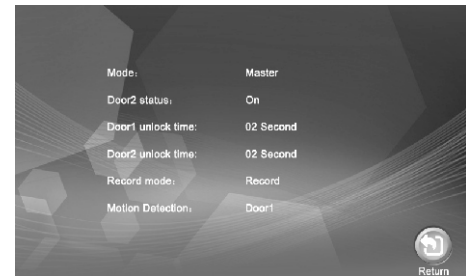


3. Setup finished back to standby mode
4. On standby mode, when detect motion start to recording or snapshot

LEAVE MESSAGE

1. Scroll the button “⚙️” upward or downward to move the cursor to the option “Mode”, then press “⚙️” to enter the “Mode” menu.



2. Scroll the button “⚙️” downward to move the cursor to the option “Leave Message”.

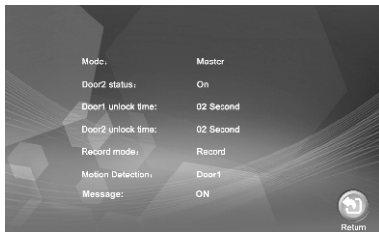

3. Setup finished back to standby mode.

4. On standby mode, when there is a message, you can see message reminding on monitor. The video will be saved in SD card automatically.

